

AddressPro® SCENE Programming

Warning! Check and make sure all AddressPro® devices are assigned to the correct ZONEs before starting scene programming.

SCENEs are recallable pre-set lighting scenarios. The first 4 SCENEs of all AddressPro® devices are factory programmed. The default FADE time as programmed by the factory is a transition time of 1 second to go to all selected SCENEs.

SCENE 1 = 100%

SCENE 2 = 75%

SCENE 3 = 35%

SCENE 4 = 1% or minimum level

To change these SCENE settings or add more SCENEs please follow the instructions below. AddressPro® system can be programmed up to 12 SCENEs.

To store a SCENE:

1. Set all lights on the system to a desired light level. This can be done globally, or by selecting individual ZONEs.
2. Press and release the SCENE button. The SCENE button will remain lit.
3. Enter the desired SCENE number (1-12), which you wish to save this lighting scenario to, by pressing and releasing a selected number button on the numeric keypad. The entered numeric button will remain lit.
4. Press and hold the SCENE button to store all of the current light level settings to the selected SCENE number for future one-button recall. The remote will acknowledge the SCENE has been stored with an audible beep.

SCENE setup with fade time

This is the transition time to obtain the desired scene. Fade time is measured in seconds and is adjustable from 1 sec to 9999 sec

1. Set all lights on the system to a desired light level. This can be done globally, or by selecting individual ZONEs.

2. Press and release the FADE button. The FADE button will remain lit indicating "at FADE Time Mode".
3. Enter the FADE time, in seconds, by pressing and releasing the buttons on the numeric keypad. The entered buttons will flash on in the sequence that they were entered. Example: 60 seconds press and release the #6 button and then the #0/10 button. Reminder: the maximum allowed fade time is 9999 seconds.
4. Press and hold the FADE button to store the entered FADE rate. The remote will acknowledge that the FADE rate has been stored with an audible beep.
5. To store that stored FADE rate to a particular SCENE, press and release the SCENE button.
6. Enter the desired SCENE number (1-12), which you wish to save this lighting scenario to, by pressing and releasing a selected number button on the numeric keypad. The entered numeric button will remain lit.
7. Press and hold the SCENE button to store this selected SCENE with the selected FADE rate for future one-button recall. The remote will acknowledge that the SCENE has been stored with an audible beep. The saved lighting levels and FADE rate time are now saved as that SCENE number.

- Long fade times may produce gradual light level changes that are difficult to perceive.
- If at any time during a programming sequence, 6 seconds elapse without user input, the sequence will time-out and return

To recall a SCENE:

1. Enter the SCENE number and releasing the button wish to recall.

For further assistance or ordering information please contact Universal lighting technologies @ 1-800-BALLAST or visit our website at <http://www.universalballast.com>